



INSTRUCTIONS FOR USE
Pro-Ject Phono Box II USB

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO phono amplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



Warning of a hazard for the user, the unit or possible misuse.




Important notice.

Setting the cartridge mode

The phono amplifier must be used in either MM (moving magnet) or MC (moving coil) mode according to the construction principle of the pickup cartridge to be used. Since most cartridges use the MM (moving magnet) principle the phono amplifier is factory set to operate in this mode. To find out which type your cartridge is please consult the literature accompanying your cartridge. The literature for MC cartridges should also specify the correct impedance and capacity into which the cartridge is designed to work. If in doubt please consult your dealer.

A switch at the back of the phono amplifier sets the correct level of amplification for the cartridge.

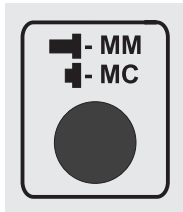


Before setting MM / MC mode the unit must be disconnected from the power supply and amplifier.

Connecting the record player

Connect the tonearm signal lead to the **In** of the phono amplifier.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white. The earthing wire of the tonearm lead should be connected to the earth terminal.

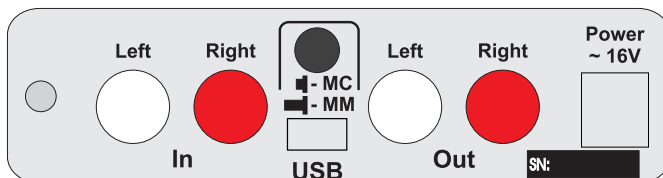

Connection to the amplifier

Connect the **Out** of the phono amplifier to a line input (such as **AUX, CD, Tuner, Tape** or **Video**) on your amplifier.

Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.





Make all connections whilst the phono amplifier is disconnected from the power supply.

*Do not connect the phono amplifiers output to a phono input (sometimes labelled **gram, disc** or **RIAA**) on the amplifier.*



Connecting to a Computer (e. g. with Microsoft® Windows® XP)

1. Connect the USB-output of the Phono Box II USB to a free USB socket on your computer and turn it on/make sure it is powered on.
2. The 'new hardware found assistant will automatically detect the unit and announces it as a "USB audio codec".
3. open the System menu via "Start" (Windows key)
 → Settings
 → Control Panel
 → Sound and Audio Devices
4. In the control panel open the "Sound and audio" menu.

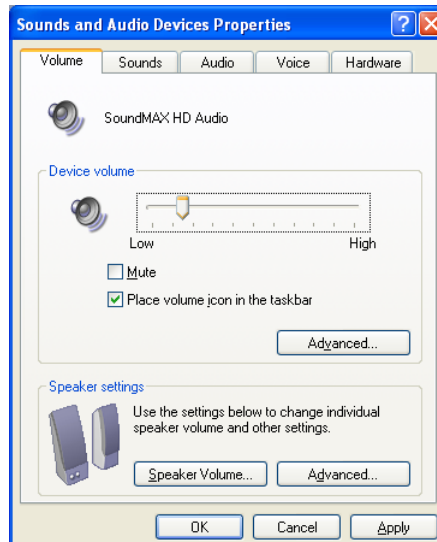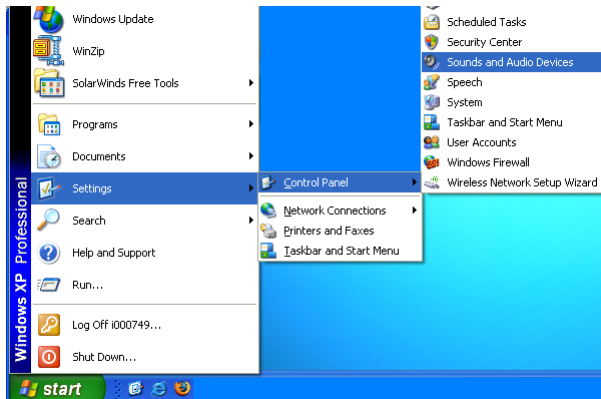

5. In the Sounds and Audio panel select the Audio tab. In the Replay section select your sound card from the pull-down lists (usually preselected).

6. Select the USB Audio CODEC from the pull down list in the Recording section. Make sure your sound card is selected for Replay.

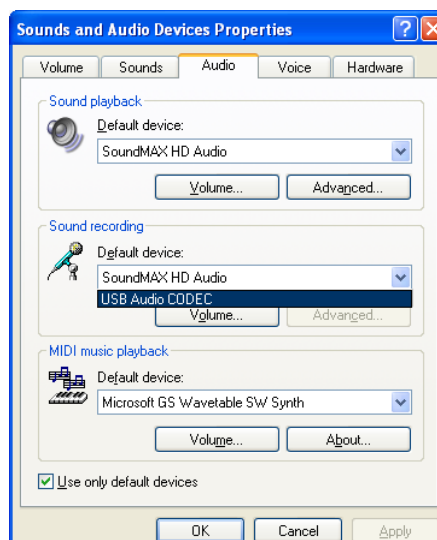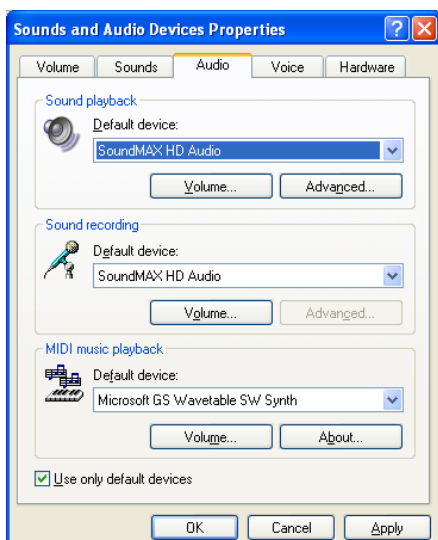

7. Confirm your selections by clicking the OK button.
8. Close the control panel windows and start your recording programme.

In case you do not have a recording programme installed on your computer, you may download one free from the Internet. Recording programmes may be found by searching Google or Altavista.



Please be aware that downloads from the Internet are made entirely at your own risk. Under no circumstances can we carry responsibility or provide support for software products sourced from the internet or for any damage or problems arising from the use thereof. All downloads should be checked with an up-to-date anti-virus programme. License fees may be applicable.

Mains power connection

The phono amplifier is supplied with a power supply suitable for your country's mains supply. Check the label before connecting to ensure compliance with the mains rating in your house. Connect the low voltage plug from the power supply to the **Power ~16V** socket of the phono amplifier before connecting the power supply to the mains.

Technical specifications Pro-Ject Phono Box II USB

Input impedance, MM / MC:	47kohms/120pF / 100ohms/120pF
Gain, MM / MC:	40dB / 60dB
Output voltage typically, MM / MC:	300mV at 1kHz - 3mV (MM Input) / 0,3mV (MC input)
Max. output:	9,5V (1kHz)
Noise floor, MM / MC:	86dB (94dB - A weighted) / 68dB (75dB - A weighted)
THD, MM / MC:	0,01 / 0,05%
RIAA-equalisation curve accuracy:	20Hz - 20kHz / max. 0,5dB
A/D converter:	16-Bit Delta Sigma
USB-output:	digital serial data protocol USB 1.1
Operating systems:	Windows®, MacOS® and Linux®
Input:	1 pair RCA/Phono sockets
Line-level output:	1 pair RCA/Phono sockets
Outboard power supply:	16V/200mA AC, suitable for your country's mains supply
Power consumption:	16V/100mA AC
Dimension W x H x D:	103 x 38 x 115mm
Weight:	570g without power supply

Potential incorrect use and fault conditions

No signal on one or both channels:

No connection between player and phono amplifier or amplifier. This could be due to a faulty plug, broken wire or solder joint or simply loose plug/socket connection.

Strong hum:

No earth connection from cartridge or arm or arm cable to phono amplifier, or earth loop.

Output too quiet or too loud, or distorted:

MM / MC mode incorrectly set - input overloading or insufficiently amplified.

Service

Should you encounter a problem which you are not able to alleviate or identify despite the above information, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

Warranty



The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH
Copyright © 2007. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.